


ABANDONED UNDERGROUND MINES OF OHIO



The ODNR Division of Geological Survey gratefully acknowledges the Ohio Mine Subsidence Insurance Underwriting Association for its financial support of mapping abandoned underground mines in Ohio.

Recommended citation: Ohio Division of Geological Survey, 2012, Abandoned underground mines of Ohio: Ohio Department of Natural Resources, Division of Geological Survey Map EG-3, generalized page-size version with text, scale 1:2,000,000, 2 p.

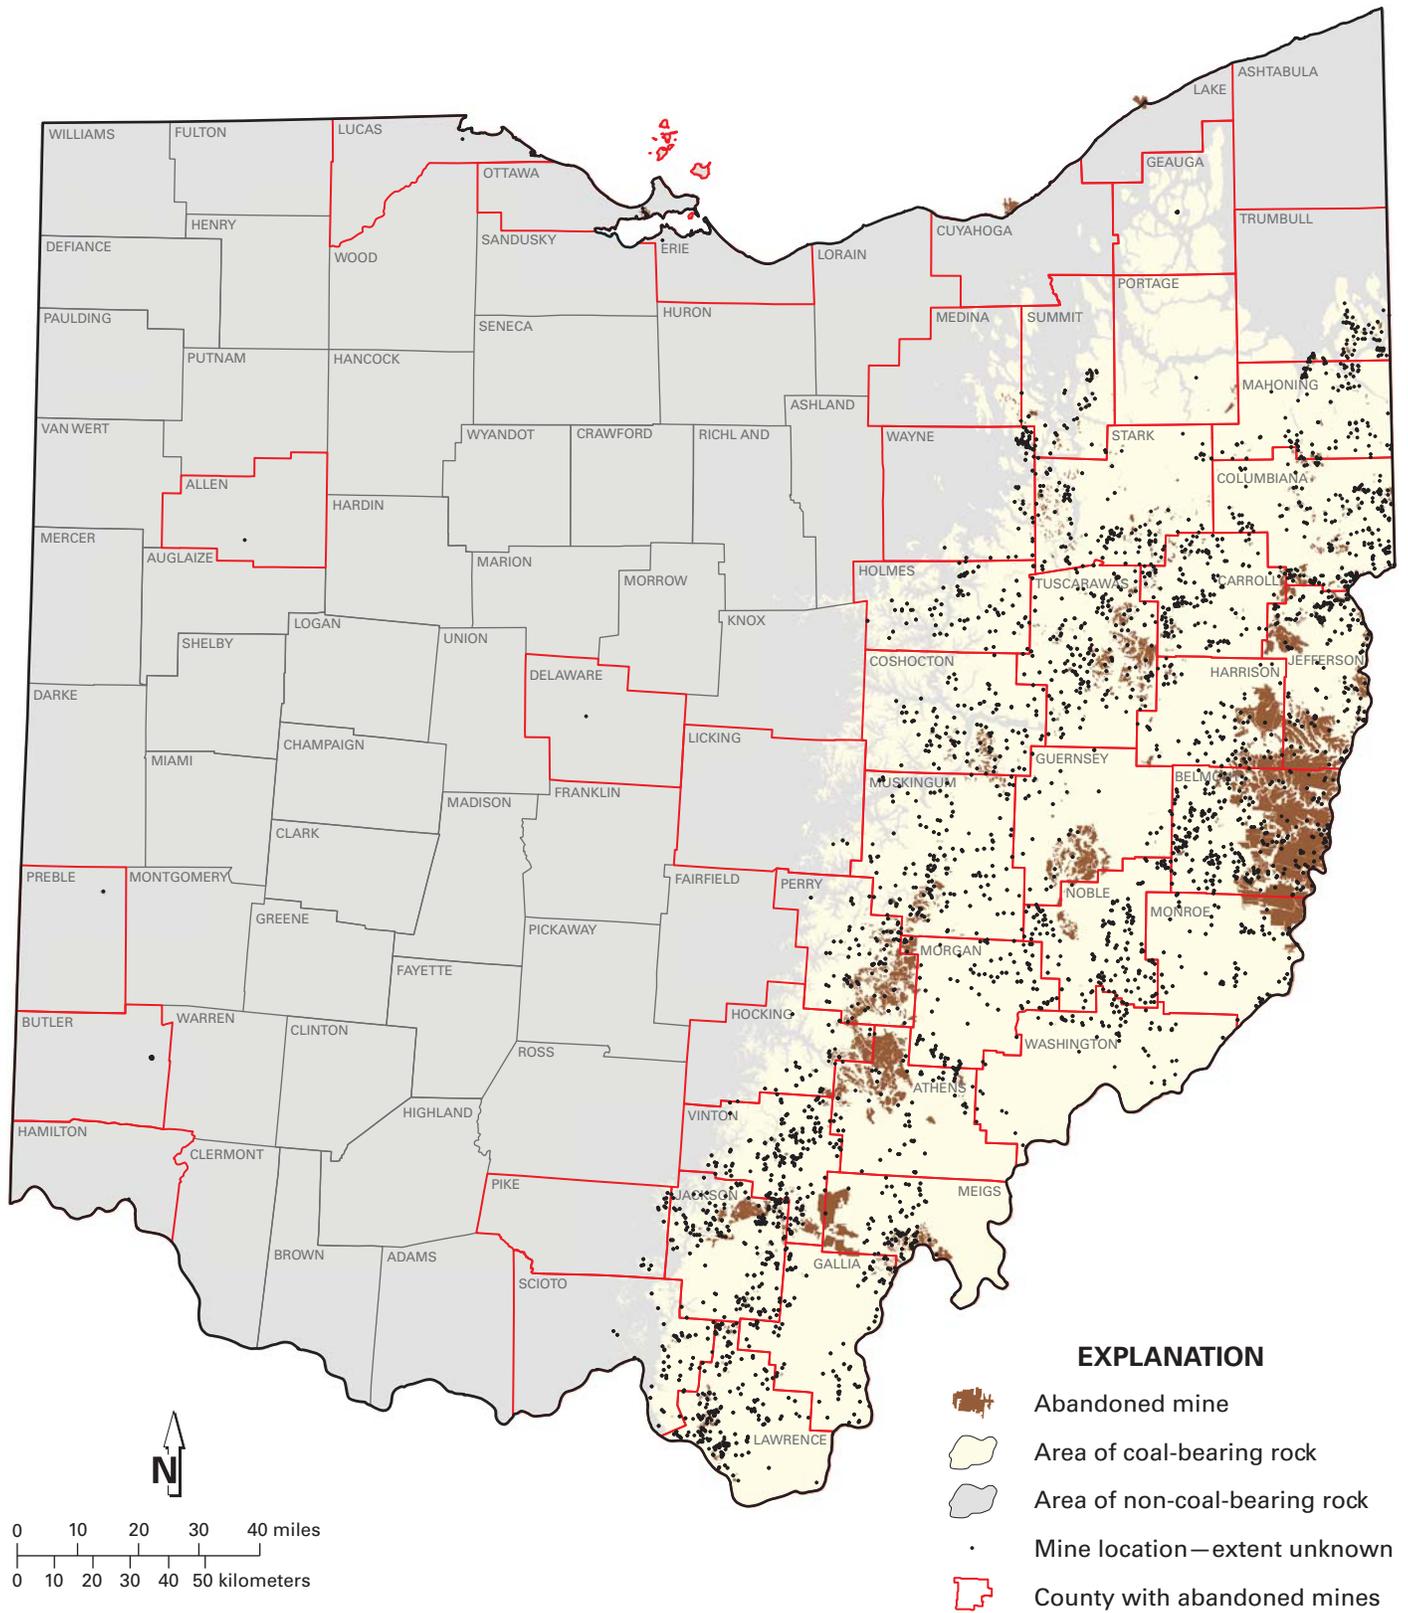

INTRODUCTION

Underground mining of rock and mineral resources in the Ohio-region began more than 200 years ago when the state was still a territory. Thousands of abandoned underground mines (AUMs) have resulted from this resource extraction and today pose a major geologic hazard, especially in the historic coal- and clay-mining districts of eastern and southeastern Ohio. The locations of a large number of these mines are known; however, mining and geologic-resource professionals believe that several thousand additional small AUMs with unknown locations likely exist because a large number of mines were created before mine-reporting laws were enacted. This map, *Abandoned Underground Mines of Ohio*, provides information about the geographic distribution of known AUM areas, several of which are part of active underground mines, and the locations of AUMs of unknown extent.

One of the most significant hazards associated with AUMs is *mine subsidence*, a lowering of the ground surface that occurs when subsurface bedrock or unconsolidated materials collapse into voids left by mining. When mines are abandoned, roof-support timbers and other mine structures can deteriorate over time and increase the risk of collapse. Even though deterioration takes place over a number of decades, mine roof collapse can occur in a short period of time without warning. A collapse can create hazardous conditions, such as small pit openings or broad depressions on the surface that result in damage to building foundations, underground utilities, and roadways.

Abandoned underground mines have been located in 43 of Ohio's 88 counties. This map is designed to educate the public as to where underground mining has occurred in the past. A larger, poster-sized map (EG-3, 1:500,000-scale); maps based on U.S. Geological Survey 1:24,000-scale topographic maps (EG-3, 1:24,000); and the online, interactive *Abandoned Underground Mine Locator* are designed to assist landowners and public officials in ascertaining whether a property overlies an AUM. Visit www.OhioGeology.com for more information on these products.

OHIO'S MINING HISTORY

Most AUMs in Ohio were used for coal production, which has a long history in the state. The first reported commercial extraction of coal occurred in 1800, prior to statehood in 1803; by 1908, approximately 50,000 workers were operating more than 1,000 underground mines in the state. From 1800 to 2010, approximately 2.35 billion tons of coal was produced from underground mines located in northeastern, eastern, and southeastern Ohio. Much of early mining occurred near cultural centers or points of coal utilization that, over time, have been enveloped by urban expansion.

The advent of post-World War II mechanization technologies made large-scale surface mining feasible and reduced the number of mines using underground-mining methods for coal extraction. However, as the availability of coal extractable by surface methods has declined over the past two decades, the volume of coal produced by underground methods has increased from approximately 35 percent to more than 67 percent of the yearly coal production in Ohio. Consequently, AUM extents have increased and knowing AUM locations is essential when planning new mining operations.

Underground mines also have been used in Ohio to produce industrial minerals—clay, limestone, salt, shale, gypsum, iron ore, and sandstone. In 2010, four industrial-mineral underground-mining operations were active; two operations produced salt and two produced limestone.

UNDERGROUND MINING METHODS

Three types of underground mines are found in Ohio, each named for the type of opening workers use to gain access to the commodity being extracted (fig. 1). A *drift mine* extends horizontally from the surface into the resource being extracted. Most abandoned underground coal mines and many industrial-mineral mines in Ohio are drift mines. A *shaft mine* has a vertical opening that extends downward from the surface, and a *slope mine* has an inclined shaft opening. Shaft and slope mines generally are used when surface mining is not economically feasible or where surface features, such as towns or rivers, make surface mining

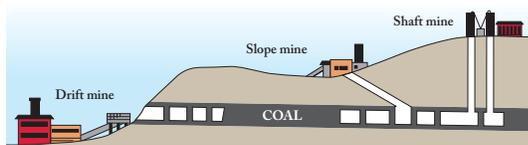


FIGURE 1.—Types of underground mining methods used in Ohio.

impractical. Shaft and slope mines in Ohio, particularly those developed to extract coal, typically extend no more than 500 feet below the surface. However, mines of greater depths have been excavated for production of industrial minerals. For example, the abandoned Pittsburgh Plate Glass limestone mine near the city of Norton (Summit County) is a shaft mine that extends more than 2,200 feet below the surface.

After a geologic commodity has been reached through a drift, slope, or shaft opening, either *room-and-pillar* or *longwall* mining—both of which are subject to subsidence—is employed to extract resources from the rocks. Since mining in Ohio began, the room-and-pillar method has been the primary underground-mining system used. In a room-and-pillar mine, large areas of a resource are extracted, creating openings (rooms), and intervening blocks (pillars) of the resource are left in place to serve as roof support for the mine (fig. 2). In some instances, a large percentage of the remaining pillars are systematically removed during a final phase of mining, known as “pulling pillars” or “pulling stumps,” to maximize resource recovery. If pillars are not removed, only 50–70 percent of the resource is recoverable.

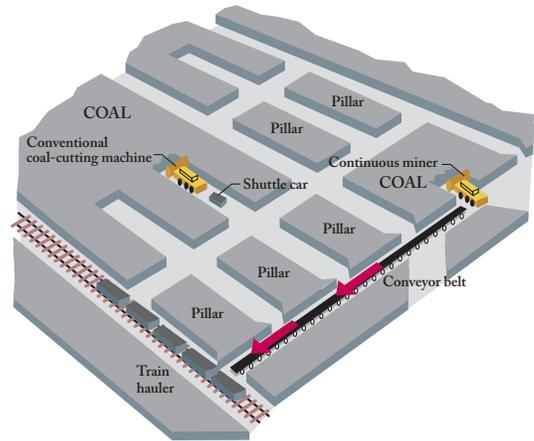


FIGURE 2.—Room-and-pillar underground-mining method. In most older mines, the rooms were created by blasting and excavating the coal into shuttle cars that hauled coal to the surface. Most modern room-and-pillar mines use continuous-miner machinery to cut and directly feed the coal to a conveyor system that transports it to the surface. (Graphic from *The Columbus Dispatch*, 2006, used with permission.)

In a longwall mine, large resource areas called *panels*, which can reach several thousands of feet in length and width, are mined in a continuous process (fig. 3). As mining progresses through a panel, no roof-supporting pillars are left in the extraction areas; instead, the roof rock is allowed to collapse into the mined-out areas in a relatively controlled process. Up to 80 percent of a mineral resource can be recovered using the longwall mining system. Even though there are more room-and-pillar mines than longwall mines in Ohio, longwall mining in recent years has become the predominant means of large-scale, underground coal extraction in Ohio.

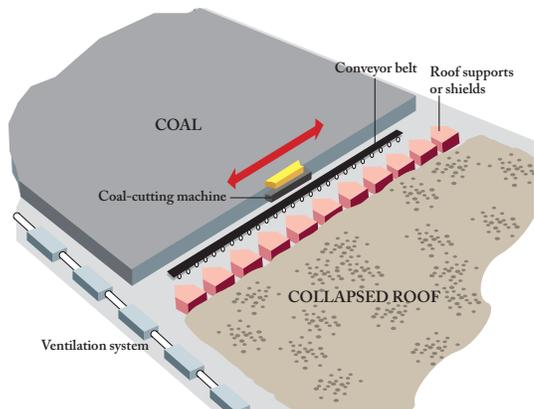


FIGURE 3.—Longwall underground-mining method. In a longwall mine, a cutting machine moves back and forth across a panel of coal up to 1,100 feet in width and 7,000 feet in length. Cut coal falls onto a flexible conveyor for removal. Hydraulic supports (shields) hold up the mine roof and protect workers, and cutting machinery is advanced as the coal is cut. The roof in the mined-out area falls as the shields advance. (Graphic from *The Columbus Dispatch*, 2006, used with permission.)